



The Grapple™ Application Guide

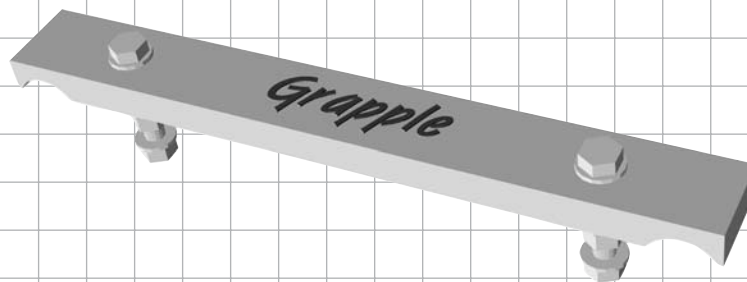

The Grapple allows you to make inline 90 degree connections between similar trusses anywhere along a perpendicular primary truss. The load capacity of the inline truss will carry 75 percent of the manufacturer's load rating. The primary truss must have point load calculations taken into consideration. The secondary trusses must be supported at both ends. Cantilevering of truss is not recommended.

See over for safety warning, other applications and approved accessories

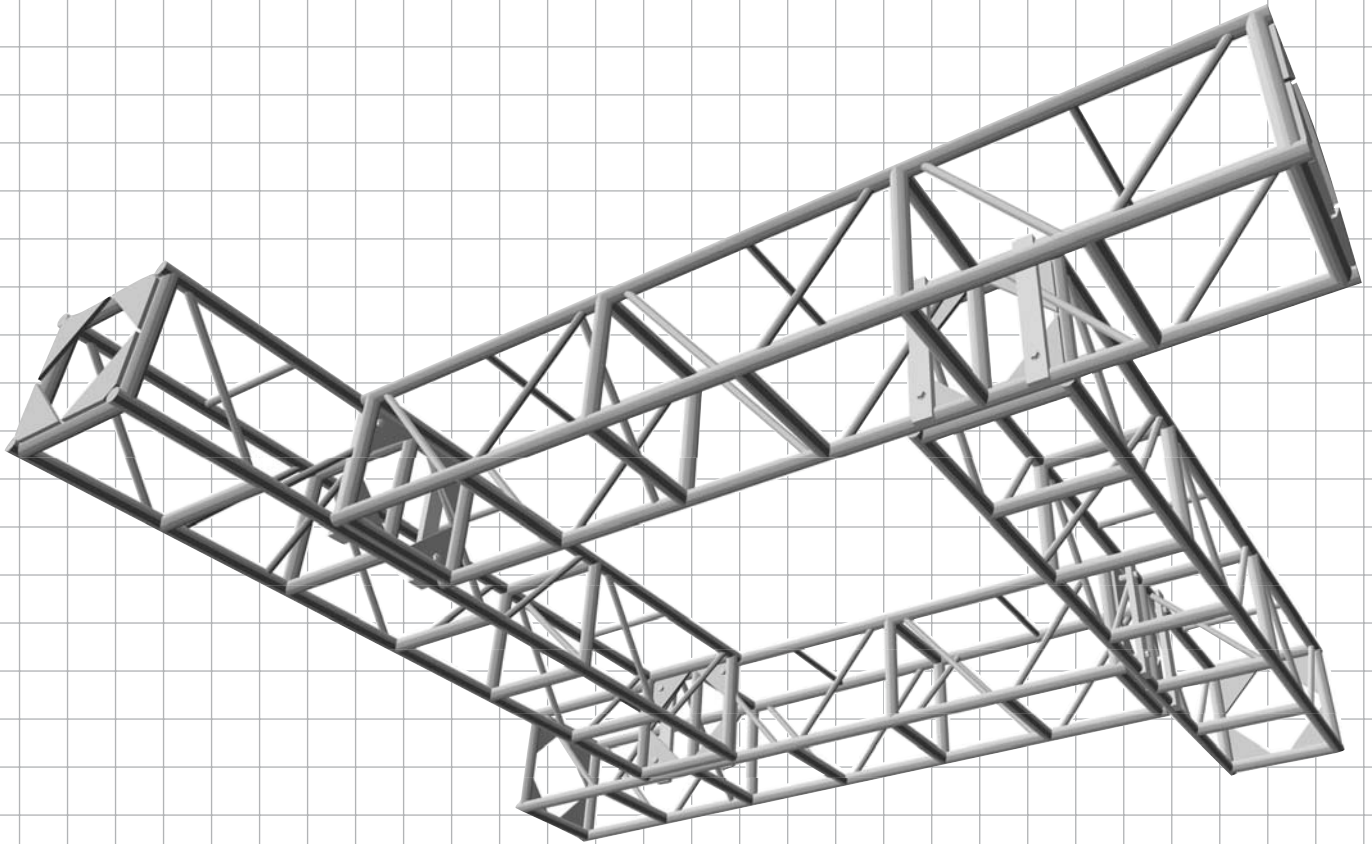

LOS ANGELES

10643 Glenoaks Blvd.
Pacoima, CA 91331
USA

Tel: +1 818.899.8818
Fax: +1 818.899.8813

LONDON

21 Armstrong Way
Southall
UB2 4SD England

Tel: +44 (0)20.8574.9700
Fax: +44 (0)20.8574.9701

NEW YORK

100 Asia Place
Carlstadt, NJ 07072
USA

Tel: +1 201.896.8600
Fax: +1 201.896.8601

BEIJING

No. 309, Building 6
Sanlitun Nanlu
Chaoyang District
Beijing, China 100027


Tel: +86 10.8492.1587
Fax: +86 10.8492.7635

TORONTO

409 Saddler St. West
Box 654, Durham
Ontario N0G-1R0


Tel: +1 519.369.9990
Fax: +1 519.369.9992

The Grapple™ Application Guide

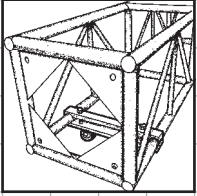


CASTER PLATE ATTACHMENT • REQUIRES CASTER PLATE ACCESSORY

Now you can temporarily attach wheels to your box trusses, easily removing them for applications that require clear accessibility on all four sides.

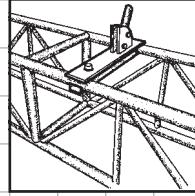


FOLLOW SPOT YOKE MOUNT • REQUIRES SPOT YOKE ACCESSORY

Provides an economical, secure way to attach a follow spot to your truss. Spigot accepts most medium sized spotlight yokes.

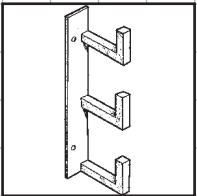


CABLE CRADLE ATTACHMENT • REQUIRES CABLE CRADLE ACCESSORY

Keeps cable out of the way of riggers, technicians and spot operators. Conveniently organize cable to prevent tangling

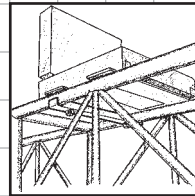


FOLLOW SPOT SEAT MOUNT • REQUIRES SPOT SEAT ACCESSORY

Provides an economical, secure way to attach a follow spot operator seat to your truss. Includes seat belt.

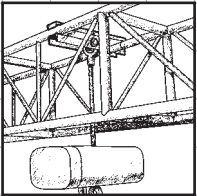


MOTOR POINT ATTACHMENT • REQUIRES MOTOR POINT ACCESSORY

The motor point attachment allows a chain hoist to be attached directly to the truss with no additional hardware. Will support a 1 ton (2,000 pound) load. Available for medium-duty, heavy-duty, and PRT truss only.

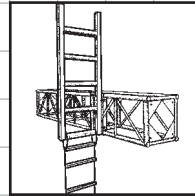


TRUSS ACCESS LADDER • REQUIRES TRUSS LADDER ACCESSORY

Finally there is an easier and safer way to access your rig. Now you can simply climb up a wire rope ladder onto the grapple ladder and safely step onto the top of the truss. Will safely support a 200 pound worker with a 200 pound worker anchoring the rope ladder at the floor.

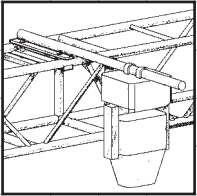

OUTRIGGER ATTACHMENT • REQUIRES POST/OUTRIGGER ACCESSORY

The post/outrigger unit in a horizontal position will support lights, cable, traveler tracks etc. Will support a load, perpendicular to the truss, at a distance beyond the truss face. Load weight not to exceed 6900 pound-inches, e.g. 300 pounds at 23 inches from truss face.

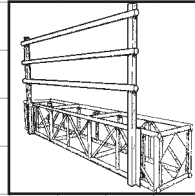

SIDE POST ATTACHMENT • REQUIRES POST/OUTRIGGER ACCESSORY

The post/outrigger assembly provides secure vertical support. It can be used for fixture mounting or as support for a handrail system on catwalks and spot bridges. Capable of supporting a handrail load of 200 pounds at a standard handrail height of 42 inches above the truss face. Spacing between vertical members must not exceed 12 foot 6 inches if used for handrail.

WARNING!

Grapples must be installed by qualified rigging personnel only. Incorrect use of Grapples may cause hazardous conditions and possible injury. Only use Grapples for applications and loadings described in TMB's Grapple Application Guide. A qualified engineer must approve all other applications.

Use TMB Grapple accessories only.